



Hardened Wood Flooring

Q - Plank

REINFORCED WOOD SURFACE

Q-Plank featuring Woodura® has a reinforced wood surface created by fusing a thin sheet of wood onto a wood fiber core through a powder mix layer. The powder mix perfectly fills up the natural openings of the wood, enhances the wood appearance and creates a significantly stronger surface with a hardness about three times greater than a traditional solid oak layer.


www.wikinggulve.dk

LOCKING SYSTEMS







1. INSTALLATION PREPARATIONS

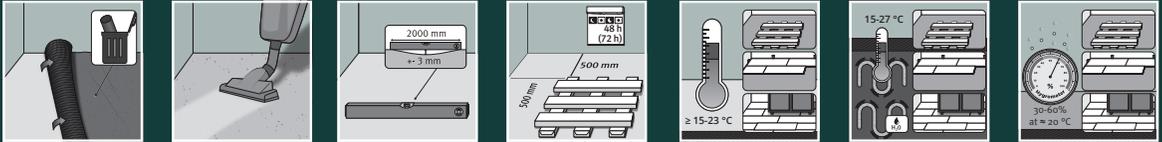

2. SUBFLOOR PREPARATIONS

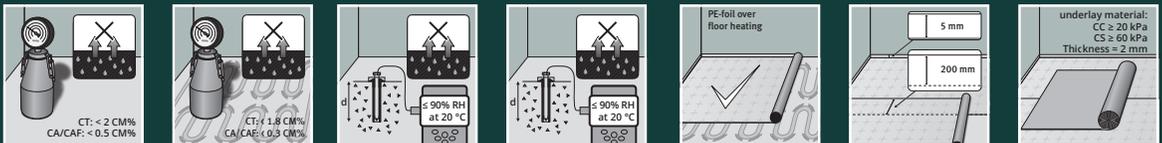

3. FLOOR INSTALLATION

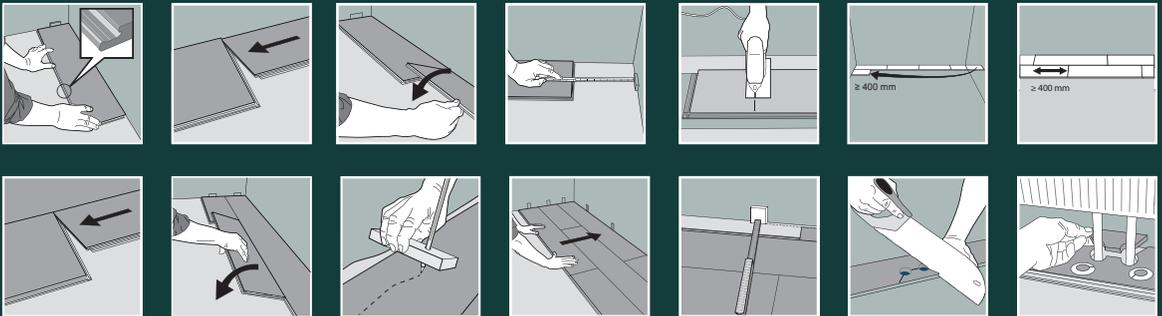

4. DISMANTLING



5. CLEANING & MAINTENANCE



IMPORTANT INFORMATION

- Packages must be acclimated a minimum of 24 to 48 hours prior to installation in the room where the installation will take place.
- In rooms larger than 15 x 15 m (225 m²), the flooring must be installed in smaller sections with expansion joints.
- The distance to walls and other permanent pieces of construction elements (such as pillars and kitchen islands) should be approximately 1,5 mm per meter of the length and width of the floor (width 10 m = 15 mm expansion gap).
- Never install very heavy pieces of furniture such as kitchen islands/cabinets on top of the flooring.
- The indoor climate should have a temperature between 15-23°C and relative air humidity between 30-60% (according to Swedish Standards Institute).
- Always follow the floor manufacturers requirements and specifications regarding subfloor preparation.

For more detailed floor installation instructions, please visit: www.wikinggulve.dk